



Yeelight Sensor Makeup Mirror User Manual

Read this manual carefully before use, and keep it properly.

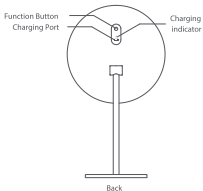

Product Overview

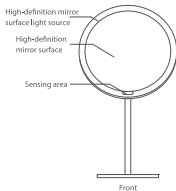

Instructions

1. The function button "O" is on the back side of the mirror ;
2. Short press the function button "O" to power on the mirror ;
3. On the status of power on, the light will automatically light up when people close to the mirror within 30cm, and automatically light off after 10 seconds when people leave away 50cm or above from the mirror; (The Infrared sensor is located at the dark area on the bottom edge of the mirror surface.)
4. On the status of power on, short press function button "O" one by one will switch among three modes;

Operating Mode	Color Temperature	Brightness
Daily make-up/skin care mode	Neutral White 4500K	90%
Delicate make-up mode	Daylight 5200K	100%
Dating preview mode	Warm Light 3500K	70%

- * The default operating mode when using the first time is Daily make-up/skin care mode, subsequent mode will remain the previous mode of turning off.





5. Extended press the function button "O" to power off.

Low battery indication

1. When the light is turned on in the condition of low battery, the light pulse for 5s continuously to warn charging. To ensure normal use, please charge as soon as possible.
2. If the product is not charged after the first time low battery indication, the light will continuously pulse for 5s to indicate charging until it is charged or powered off.
3. After the first time pulse indication, the power can be maintained for about 40min on status of make up/skin care operation mode.
4. After not using for a long time, if the product does not start properly after charging, please keep charging for more than 10min, and the make-up mirror can be used in normal state.

Charging Method

1. Connect the charging cable to the charging port, the charging indicator will light on if connected right, indicating that the mirror is charging. The indicator will light off after the mirror fully charged.
 2. Charge the make-up mirror after the low battery indication, fully charged will be 2.5-3h. After fully charged, the mirror is workable for 2.5-3h continuously in daily make-up/skin care mode, enable to be used for 7-8 days.
- * Remark: Based on the laboratory test data, calculated on the assumption of 20min daily use.



Parameters

Product model: YLGJ01YL

Rated input: 5V \Rightarrow A

Battery capacity: 2,000mAh

Net weight: 700g

Operating temperature: -10~40 °C

Operating humidity: 0%-85%RH

Features



High color rendering index
give you real make-up look*



Smart sensor
release your hands



Three modes to choose freely



60 LEDs and
Uniform Illuminated



Rechargeable and Flexible



High definition Silver
Plated Mirror Surface

* Based on measured value, tolerance of color rendering index within 2%.



Safety precautions

1. The light source of this light should be replaced by the manufacturer, its service agent or others with the similar qualifications.
2. The sensing distance of the product may be affected by the color of the clothes and the ambient light.
3. Please use the adapter with rated output of 5V (5V and above) during charge. To prevent damage to the product, do not use adapters with improper rated output.
4. If light flickers abnormally or has other obvious abnormalities during use, please charge the product as soon as possible. If the problem is not solved after charge, please stop using this product immediately.
5. If the function button is failure, extended press the button for more than 5s to restart the make-up mirror.
6. Do not use the product at unstable places where it is apt to topple and fall.
7. To prevent fire and explosion, it is forbidden to put this product close to or into the fire source.
8. Do not use this product in the bathroom or other moist places since there is no special waterproofing treatment for this product.
9. Correct battery disposal methods: do not decompose, hit or squeeze the battery or put it into fire; stop using the battery if it swell seriously; do not put the battery in the high temperature environment.

Product Performance Fault Table

Name	Performance fault
Yeelight Sensor Make-up Mirror	Lighting failure
	Smart sensor failure
	Function button failure
	Charging indicator abnormal display
	Crack of product shell caused by structure, material or other non-human factors

Malaysia & Singapore

* Service Hours May Applies



Welcome to visit Malaysia & Singapore website www.yeelight.asia

Customer Service Email Address: service@tradegallery.co

Address (Malaysia): The Scott Garden, 58200 Kuala Lumpur

Address (Singapore): 57 Ubi Avenue 1, #05-16, Singapore 408936

China



Welcome to visit official website www.yeelight.com

Customer Service Email Address: support@yeelight.com

Manufacturer: Qingdao Yeelink Information Technology Co., Ltd.

Address: 10F-B4, Building B, Qingdao International Innovation Park,

No.1 Keyuan Weiyi Road, Laoshan District, Qingdao City, Shandong Province, P.R.China